Stacks

- A stack is an example of a **data structure**
  - A method of organising data
  - Defined structure and operations
- Stacks typically used for temporary storage of data
- Analogous to a stack of paper or a stack of cards
- Some rules:
  - **Push**: Place cards on the **top of the stack**
  - **Pop**: Remove cards from the **top of the stack**
  - **LIFO**: Last In is the First Out
  - Compare with **FIFO**: First In First Out

Stack example

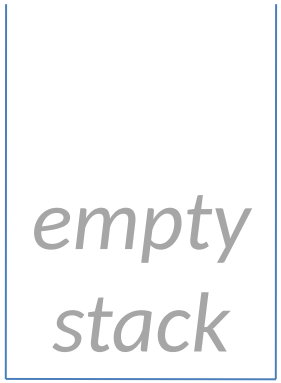

push 8

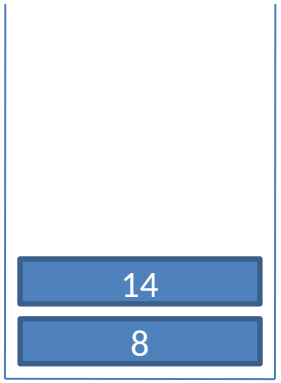

push 14

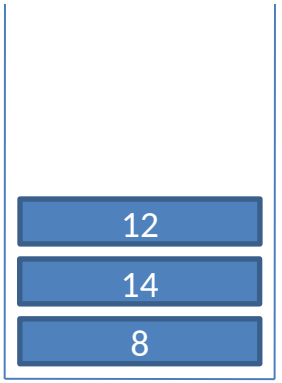

push 12

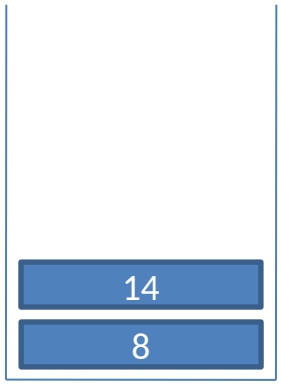

pop 12

pop 14

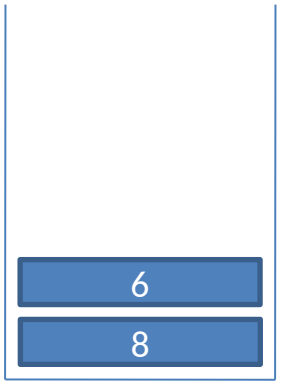

push 6

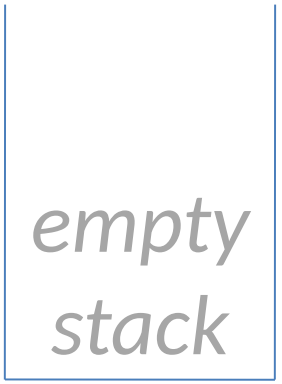

pop 6
pop 8

Stack implementation

- Stacks are fundamental to the operation of most modern computers
  - CPUs may provide special instructions, addressing modes and registers for the purpose of manipulating stacks

- To implement a stack data structure we need …
  - An area of **memory** to store the data items
  - A **Stack Pointer (SP) register** to point to the top of the stack
  - A stack **growth convention**
  - Some well defined operations: **initialize, push, pop**

Stack growth convention

- Ascending or Descending?
  - Does the stack grow from low to high (**ascending stack**) or from high to low (**descending stack**) memory addresses?
- Full / Empty?
  - Does the stack pointer point to the last item pushed onto the stack (**full stack**), or the next free space on the stack (**empty stack**)?

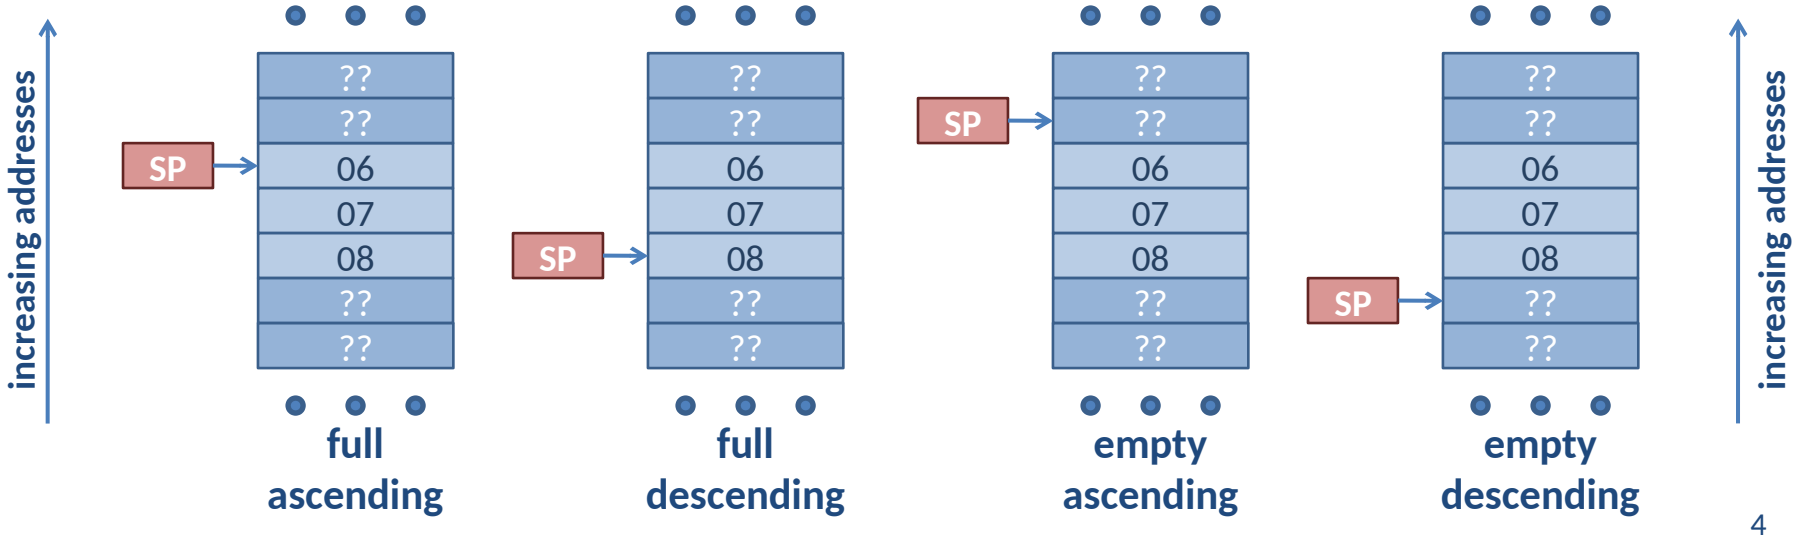

Stack implementation

- Assume full descending stack growth convention
- To **push** a word onto the stack
  - decrement the stack pointer by 4 bytes (= 1 word = 32 bits)
  - store the word in memory at the location pointed to by the stack pointer
- e.g. push 0x45 using R12 as stack pointer

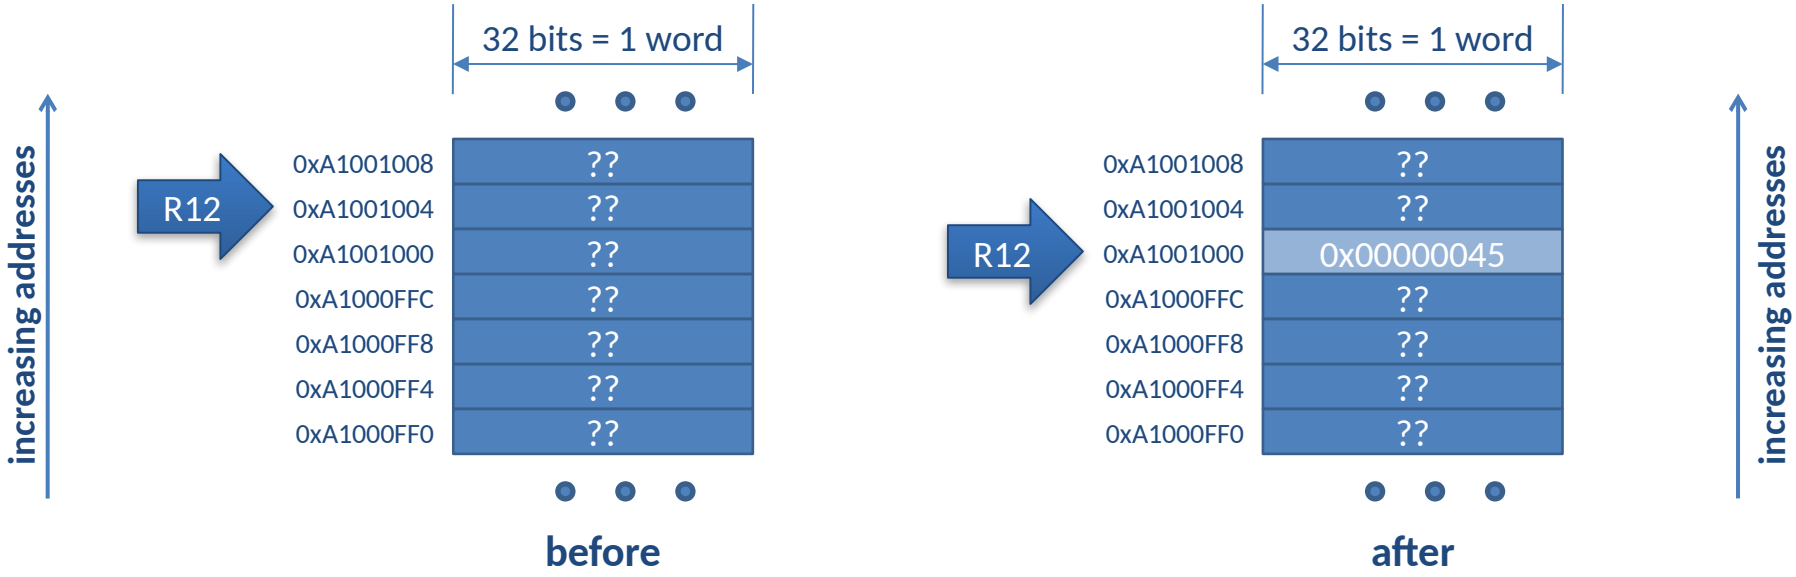

Stack implementation

- e.g. push 0x45, push 0x7b, push 0x19

```
@ push 0x45
LDR     R0, =0x45
SUB     R12, R12, #4
STR     R0, [R12]

@ push 0x7b
LDR     R0, =0x7b
SUB     R12, R12, #4
STR     R0, [R12]

@ push 0x19
LDR     R0, =0x19
SUB     R12, R12, #4
STR     R0, [R12]
```

Stack implementation

- Assume full descending stack growth convention
- To **pop** a word off the top of the stack
  - load the word from memory at the location pointed to by the stack pointer (into a register)
  - increment the stack pointer by 4 bytes

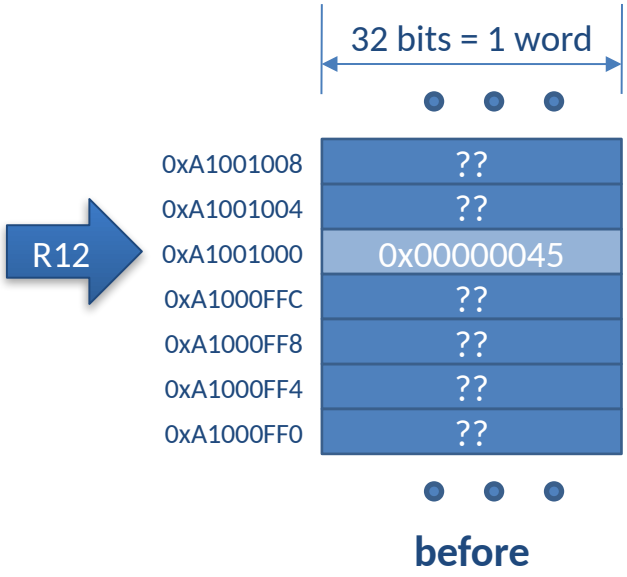

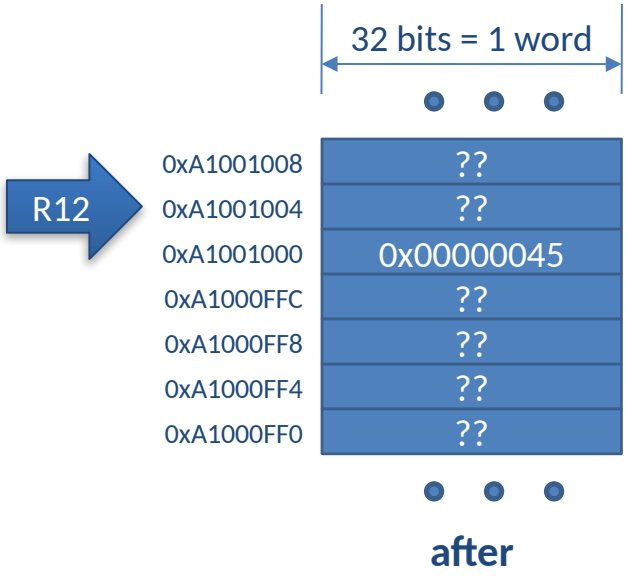

Stack implementation

- e.g. pop three word size values off the stack

```
@ pop
LDR     R0, [R12]
ADD     R12, R12, #4

@ pop
LDR     R0, [R12]
ADD     R12, R12, #4

@ pop
LDR     R0, [R12]
ADD     R12, R12, #4
```

- If we had previously pushed 0x45, 0x7b and 0x19, in that order, we will pop 0x19, 0x7b and 0x45

Pushing / Popping non-word size data

- Could push values of any size on to a stack
- To push *n*-bytes (assuming a full descending stack)
  - SUBtract *n* from SP
  - STR *n* bytes at SP
- To pop n-bytes (assuming a full descending stack)
  - LDR *n* bytes at SP
  - ADD *n* to SP
- **Pushing non-word size data is problematic due to memory alignment constraints**

Pushing / Popping non-word size data

- e.g. Push 1 word, followed by 3 half-words, followed by 2 words …

```
@ push word from R0
SUB     R12, R12, #4
STR     R0, [R12]

@ push 3 half words from R1, R2 and R3
SUB     R12, R12, #2
STRH    R1, [R12]
SUB     R12, R12, #2
STRH    R2, [R12]
SUB     R12, R12, #2
STRH    R3, [R12]

@ push 2 words from R4 and R5
SUB     R12, R12, #4
STR     R4, [R12]
SUB     R12, R12, #4
STR     R5, [R12]
```

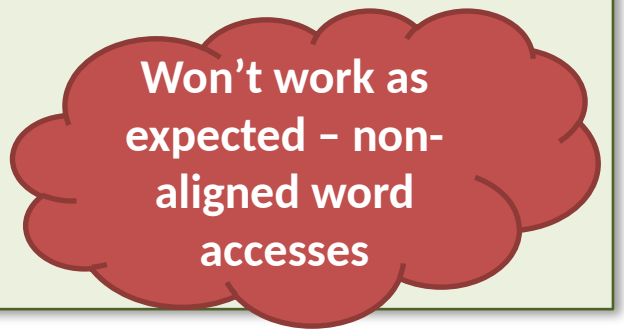

Pushing / Popping non-word size data

- e.g. … continued … popping same data into original registers …

```
@ pop 2 words into R5 and R4
LDR     R5, [R12]
ADD     R12, R12, #4
LDR     R4, [R12]
ADD     R12, R12, #4

@ pop 3 halfwords into R3, R2 and R1
LDRH    R3, [R12]
ADD     R12, R12, #2
LDRH    R2, [R12]
ADD     R12, R12, #2
LDRH    R1, [R12]
ADD     R12, R12, #2

@ pop word into R0
LDR     R0, [R12]
ADD     R12, R12, #4
```

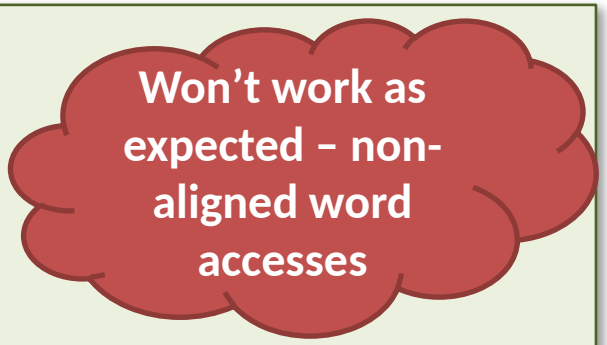

Addressing Modes for Stack Operations

- e.g. Push word from R1 to stack pointed to by R12

```
@ push word from R0
SUB     R12, R12, #4
STR     R0, [R12]
```

- Replace explicit SUB with **immediate pre-indexed** addressing mode

```
@ push word from R0
STR     R0, [R12, #-4]!
```

- Similarly, to pop word, replace explicit ADD with **immediate post-indexed** addressing mode

```
@ pop word into R0
LDR     R0, [R12], #4
```

System Stacks

- In general, stacks …
  - can be located anywhere in memory
  - can use any register as the stack pointer
  - can grow as long as there is space in memory
- Usually, a computer system will provide one or more system-wide stacks to implement certain behaviour (in particular, *subroutine calls*)
  - ARM processors use register R13 as the **stack pointer** (SP)
  - Stack pointer is initialised by startup code executed when the computer is powered-on
  - Limited in size (stack overflow error)

System Stacks

- Rarely any need to use any other stack
- Use the system stack pointed to by R13/sp for your own purposes

```
@ push word from R0
STR     R0, [sp, #-4]!
```

Note use of sp instead of R13

- Never initialise sp / R13

```
@ load address 0xA1000000 into R13
LDR     R13, =0xA1000000
```

Don't do something like this!!

- Typical use of a system stack is temporary storage of register contents
- **Programmer's responsibility to pop off everything that was pushed on to the system stack**
  - **Not doing this is likely to result in an error**

LDM and STM instructions

- Frequently we need to load/store the contents of a number of registers from/to memory

```
@ store contents of R1, R2 and R3 to memory at address 0xA1001000

            LDR     R0, =0xA1001000

            STR     R1, [R0]
            STR     R2, [R0, #4]
            STR     R3, [R0, #8]
```

```
@ load R1, R2 and R3 with contents of memory at address 0xA1001000

            LDR     R0, =0xA1001000

            LDR     R1, [R0]
            LDR     R2, [R0, #4]
            LDR     R3, [R0, #8]
```

LDM and STM instructions

- ARM instruction set provides **LoaD Multiple** (**LDM**) and **STore Multiple** (**STM**) instructions for this purpose
- The following examples achieve the same end result as the previous example …

```
@ store contents of R1, R2 and R3 to memory at address 0xA1001000

            LDR     R0, =0xA1001000

            STMIA   R0, {R1-R3}
```

```
@ load R1, R2 and R3 with contents of memory at address 0xA1001000

            LDR     R0, =0xA1001000

            LDMIA   R0, {R1-R3}
```

LDM and STM behaviour

- Consider the following STM instruction …

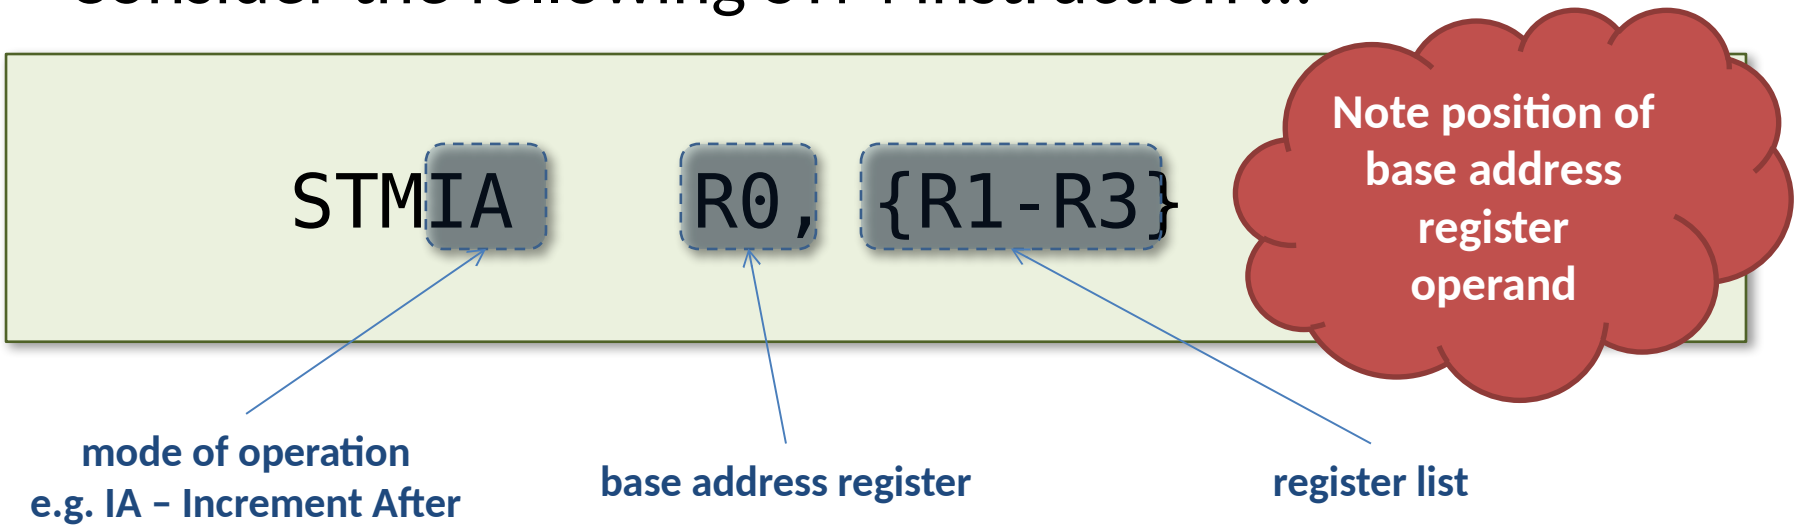

- Increment After (IA) mode of operation:
  - first register is stored at <base address>
  - second register is stored at <base address> + 4
  - third register is stored at <base address> + 8
- **Contents of base register `R0` remain unchanged**

LDM and STM behaviour

```
STMIA   R0, {R1-R3}
```

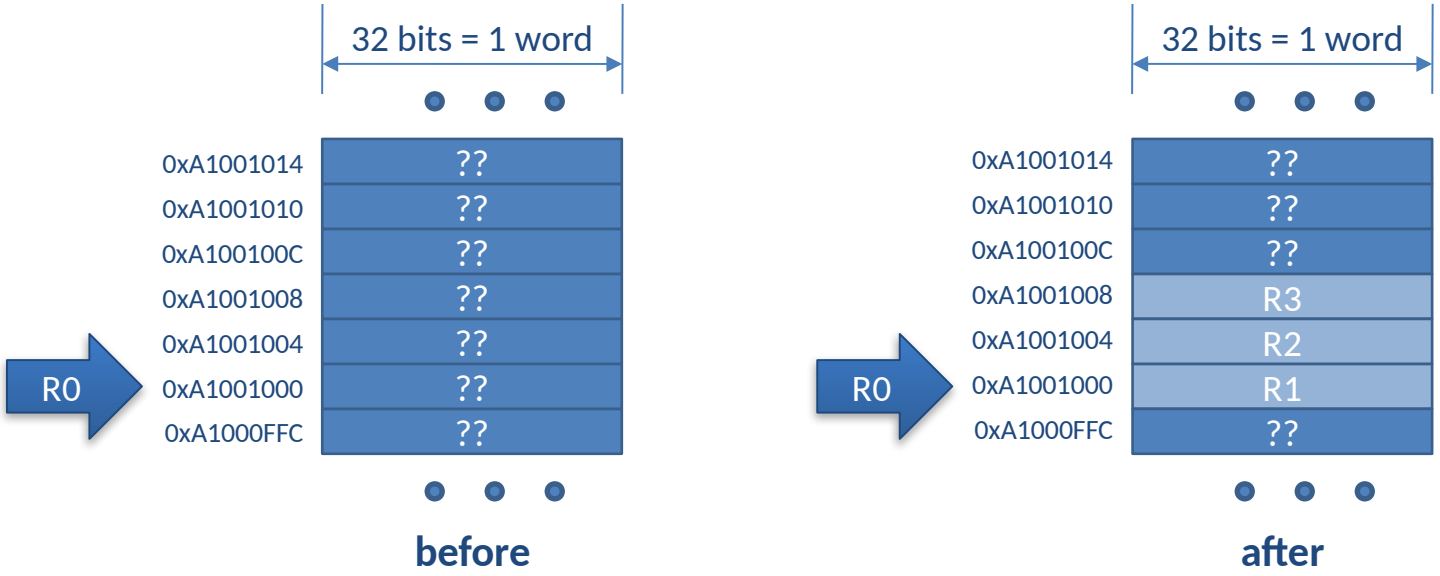

LDM and STM behaviour

- Four modes of operation for LDM and STM instructions

Behaviour	LDM	STM
Increment After	`LDMIA`	`STMIA`
Increment Before	`LDMIB`	`STMIB`
Decrement After	`LDMDA`	`STMDA`
Decrement Before	`LDMDB`	`STMDB`

- Register list (e.g. `{R1-R3, R10, R7-R9}`)
- Order in which registers are specified is not important
- **For both LDM and STM, the lowest register is always loaded from the lowest address, regardless of mode of operation (IA, IB, DA, DB)**

LDM and STM behaviour

```
STMDB        R0, {R2,R5-R7}
```

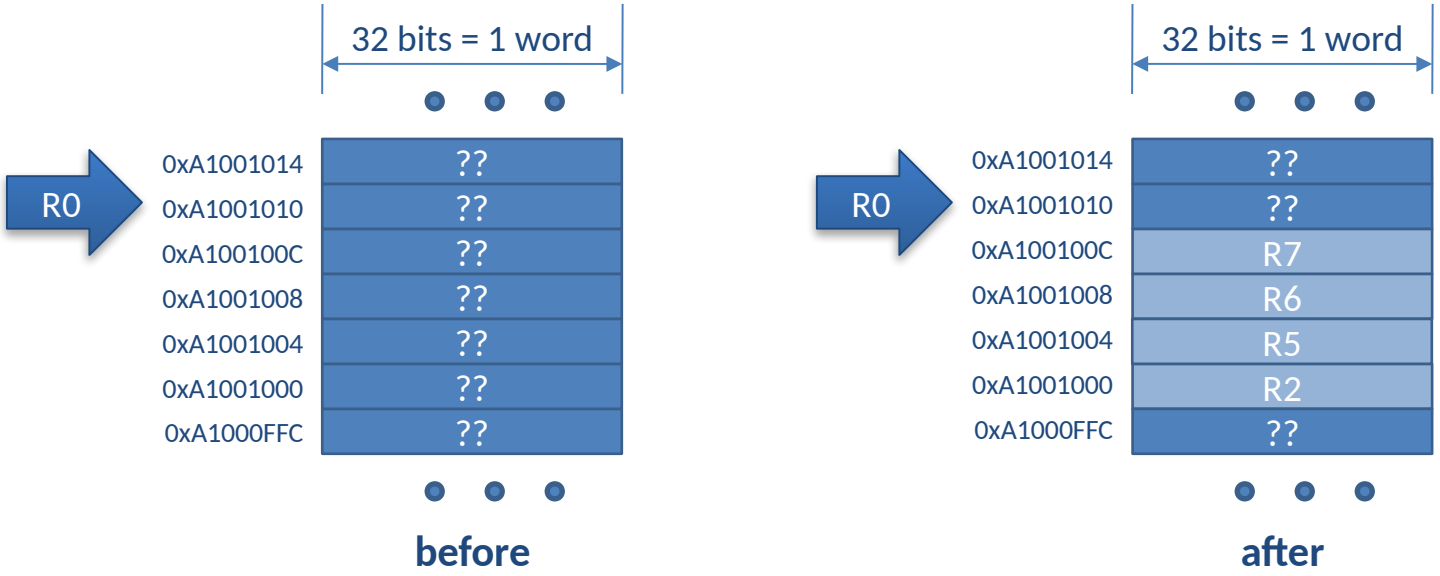

LDM and STM with stacks

- Frequently use LDM and STM instructions to load/store data from/to a stack
- Must choose mode of operation (IA, IB, DA, DB) appropriate to stack growth convention
- e.g. Full Descending stack
  - Decrement Before pushing data (STMDB)
  - Increment After pushing data (LDMIA)
- To push/pop data using LDM and STM
  - Use stack pointer register (e.g. R13 or sp) as base register
  - **Use ! syntax to modify LDM/STM behaviour so the stack pointer is updated**, e.g.

```
        STMDB    sp!, {R1-R3}
```

LDM and STM behaviour

```
STMDB   sp!, {R1-R3}
```

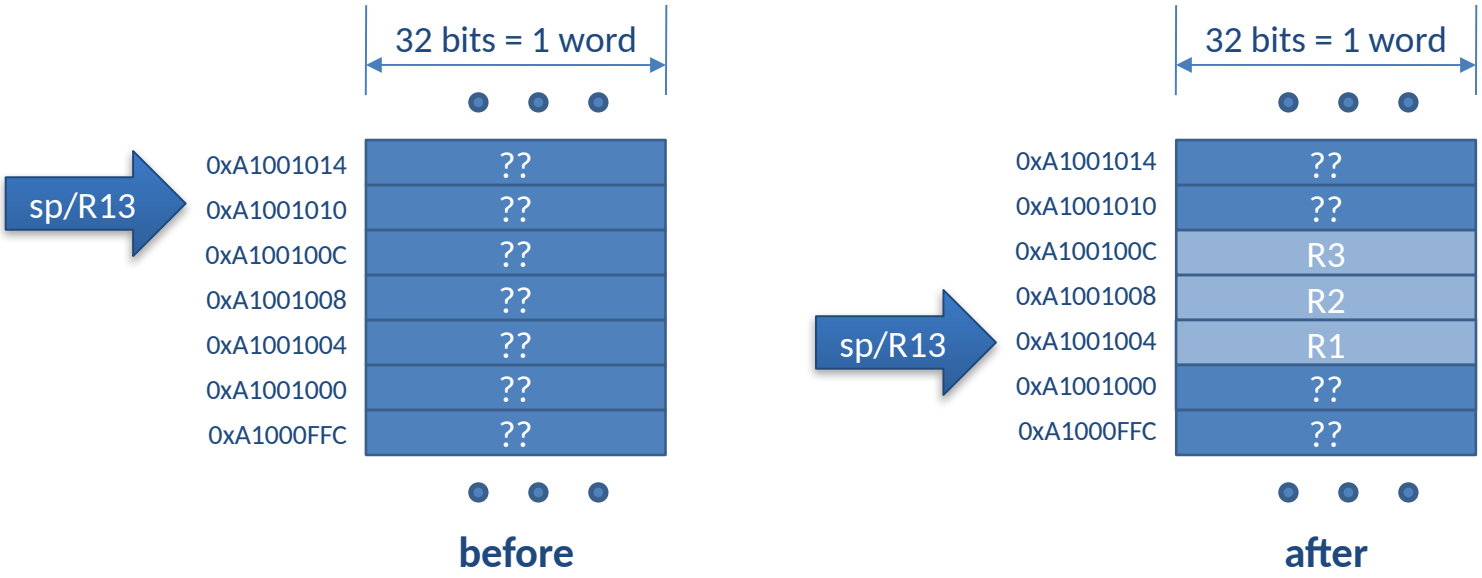

LDM and STM with stacks

- e.g. Push R1, R2, R3 and R5 on to a full descending stack with R13 (or sp) as the stack pointer

```
STMDB    sp!, {R1-R3,R5}
```

Note use of ! in sp!

- e.g. Pop R1, R2, R3 and R5 off a full descending stack with R13 (or sp) as the stack pointer

```
LDMIA    sp!, {R1-R3,R5}
```

Note use of ! in sp!

- **Works because the lowest register is always loaded/stored from/to lowest address**

LDM and STM with stacks

- Because LDMxx and STMxx are frequently used to implement stacks, the ARM instruction set provides stack-oriented synonyms

Stack growth convention	Push		Pop	
	STM instruction variant	Stack-oriented synonym	LDM instruction variant	Stack-oriented synonym
Full descending	STMDB	STMFD	LDMIA	LDMFD
Full ascending	STMIB	STMFA	LDMDA	LDMFA
Empty descending	STMDA	STMED	LDMIB	LDMED
Empty ascending	STMIA	STMEA	LDMDB	LDMEA

LDM and STM with stacks

- Stack-oriented synonyms for LDMxx and STMxx allow us to use the same suffix for both LDM and STM instructions

- e.g. Push R1, R2, R3 and R5 on to a full descending stack with R13 (or sp) as the stack pointer

```
        STMFD    sp!, {R1-R3,R5}
```

- e.g. Pop R1, R2, R3 and R5 off a full descending stack with R13 (or sp) as the stack pointer

```
        LDMFD    sp!, {R1-R3,R5}
```

Stacks summary

- A stack is a data structure with well defined operations
  - initialize, push, pop
- Stacks are accessed in LIFO order (Last In First Out)
- Implemented by
  - setting aside a region of memory to store the stack contents
  - initializing a stack pointer to store top-of-stack address
- Growth convention
  - Full/Empty, Ascending/Descending
- User defined stack or system stack
- When using the system stack, always pop off everything that you push on – not doing this will probably cause an error that may be hard to correct